



# SwagTron T1 Outer Shell Replacement

Replacing or changing the outer plastic shell.

Written By: Gloria Whang



## INTRODUCTION

This guide will show you how to remove and replace the outer shell of your SwagTron T1

---




### TOOLS:

- [Phillips Head Screwdriver PH2](#) (1)
-


## Step 1 — Back Panels




 Ensure that the SwagTron is off.

- Turn the SwagTron upside down to see the underside.

## Step 2

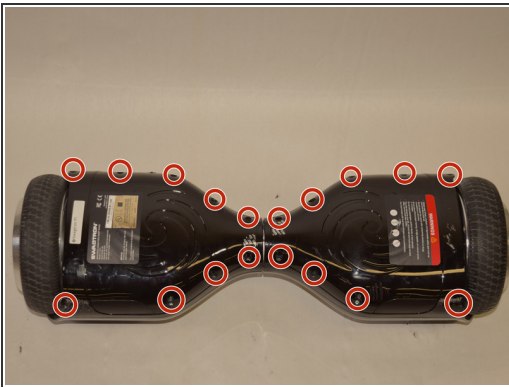

- Unscrew the eighteen 10mm screws that secure the back panels using a Phillips #2 screwdriver.


 The screws are tightly in place. It will take effort to screw them out.

 The panel is still attached to the SwagTron by wires that go to the motherboard.

- Carefully lift the panels off




### Step 3

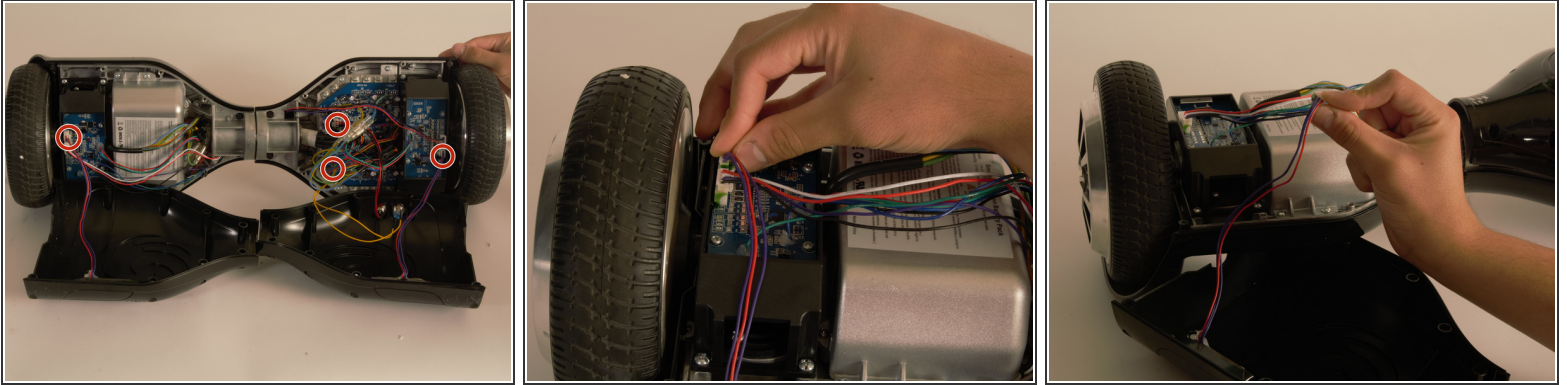

- Follow the wires from the panels to the motherboard.
  - You may need to cut any zip ties that are holding the wires together.
  - There is one connection on the battery side and three on the other side that must be removed.
- ⚠ These connections may be difficult to remove. Try to securely press the connection and pull firmly.
- Your back panels are now completely removed.


### Step 4 — Outer Shell

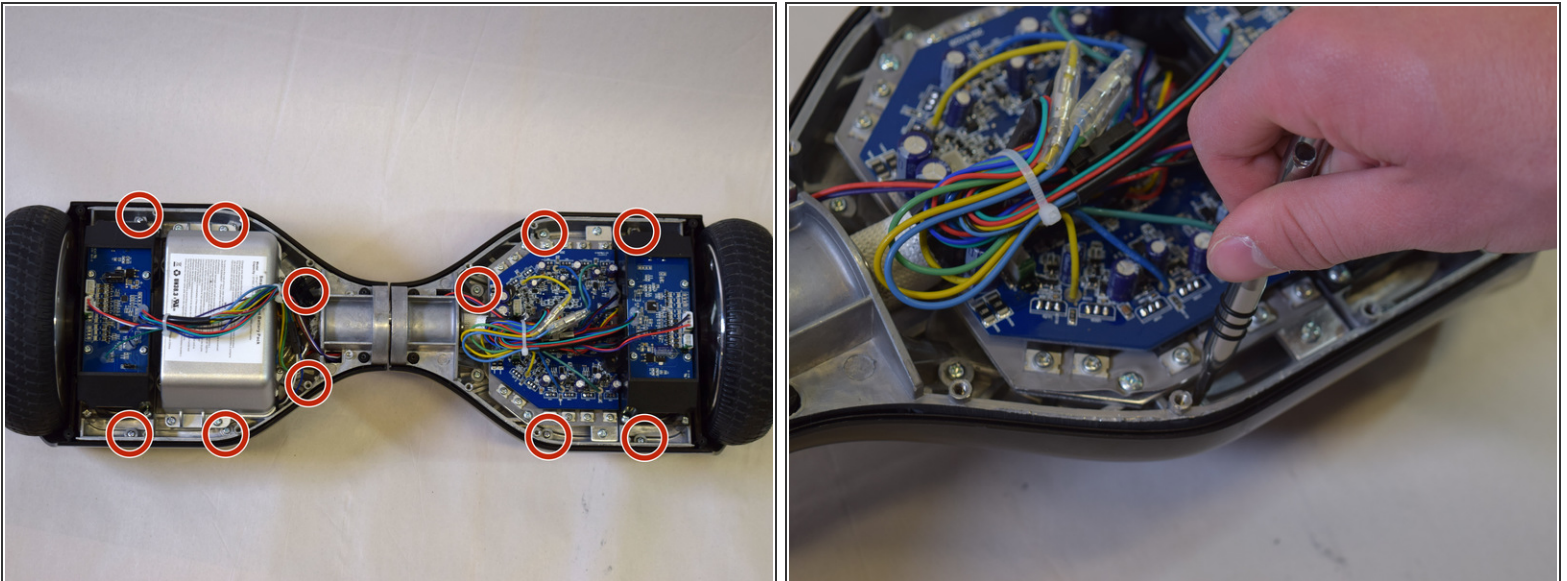

- Unscrew the twelve 10mm screws that connect the metal chassis to the top plastic panel.

**i** These screws will be low into the SwagTron.



## Step 5

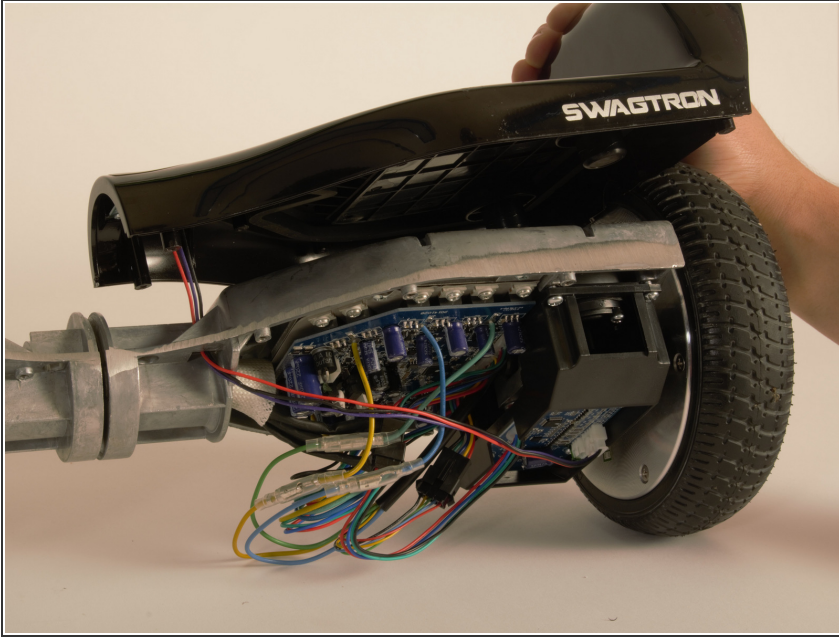

- Turn the SwagTron right side up and slightly lift up the panel.

⚠ Be careful to not pull too hard because the panel is still attached to the SwagTron by wires.

## Step 6

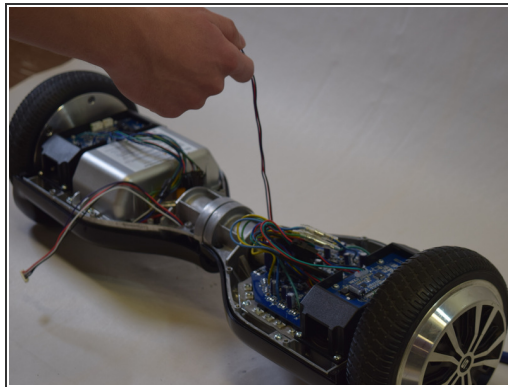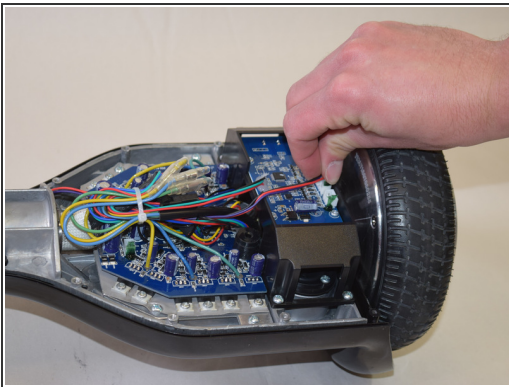

- Turn the SwagTron over and disconnect the wires from the motherboard.
- Follow the wires to the underside of the SwagTron.
- Carefully remove the cord and the panel together.
- All the panels are now free from the SwagTron.

To reassemble your device, follow these instructions in reverse order.

